

RESET

Reform reset procedure when using the Personal Organizer for the first time.

Warning! Reset will erase any user-entered information and clear all settings.

1. Press reset button on the back of the unit with a pin.

“RESET?” will display on the screen.

RESET?

2. Press «OK» in 4 seconds to confirm it and “RESET!” will appear, otherwise it will jump to home time and the data won't be erased.


RESET!

3. Two seconds later, the screen will display the capacity in the percentage format and then back home time mode.

 

CHANGING CAPITAL AND SMALL LETTER

Press «CAP» to change alphabet in capital or small letter.

BEEP SOUND ON/OFF


Touch «» key to turn the beep sound off or on .

PREFERENCE SETTING



Touch the «MENU» option located on the numeric keyboard. Use «  » to select one of the following options:

1. **LANGUAGE?:** Touch «OK» for language selection.

There are 7 languages to choose from: English(default), ESPAÑOL(Spanish), FRANÇAIS(French), DEUTSCH(German), ITALIANO(Italian), PORTUGUÊS(Portuguese) and NEDERLANDS(Dutch).





Use «  » arrows to select desired language. Press «OK» to confirm your selection.

2. **DATE SET?:** Touch «OK» for date format selection.

Use «  » to select desired format (MM/DD/YYYY YYYY/MM/DD, or DD/MM/YYYY) and touch «OK» again to confirm it.


 
3. **MEMORY CHECK:** Touch «OK» . Available memory will be displayed for 2 seconds.


4. **PC-SYNC.?:** Touch «OK» to sync with PC after the cable has been connected

In the MENU mode ,the function of Search key(« » and « ») is the same as «  » keys

BUTTONS FUNCTION

There are some buttons located on the side or face of the crust as follows:

1. « » « » : The buttons execute the data search function

2. « » : The button executes the same function as «OK» key.

3. «on» : Press this button to turn the unit on or off. The unit will turn off automatically after 5 minutes unless a key or a button is touched.




2nd KEY FUNCTION

The touch pad display is available in two different keyboard layouts. To select the specific entry key you need use the «2nd» key to toggle between the different keyboard layout.

CLOCK MODE

HOME CLOCK

SETTING HOME TIME ZONE

OPERATION	DISPLAY
Touch «clock» twice (display without symbol *)	NYC WED  1-1-2003 CAPS 0-00-00
Press «△» or «▽» to search the city of your time zone. For example :LON	LON WED  1-1-2003 CAPS 5-01-17
Press «EDIT» and then press «clock» to select home clock	*LON WED  1-1-2003 CAPS 5-03-21



SETTING HOME TIME




Before setting time, press «2nd» «DST» to switch to the daylight saving time.(Symbol # will display when DST is set.)

Touch «12/24» to toggle between 12-hour and 24-hour format.

Change date format by using the operation direction in the menu function

For example: TAIPEI January 15 2002 at 5:25 A.M. in MM/DD/YYYY format

OPERATION	DISPLAY
Press «clock» to select HOME TIME(display with symbol *),then touch «EDIT» in the numeric keyboard	*LON # WED  01-01-2003 CAPS A 06-07-00
Press «△» or «▽» until the city of your time zone appears, and you can also input the city name(6 characters Max.). For example: TAIPEI * Press «▼» to move the cursor to the 2 nd line if your time zone is less than 6 characters.	SHIFT LOCK  *TAIPEI # WED 01-01-2003 CAPS A 06-07-00

Enter the date 01 15 2002	SHIFT LOCK  * TAIPEI # WED 01-15-2002 CAPS A 06-07-00
Press 《AM/PM》 to select AM or PM (A = a.m. P = p.m.)	SHIFT LOCK  * TAIPEI # WED 01-15-2002 CAPS A 06-07-00
Enter time HH-MM 05 25 and then press 《OK》 The input day shows automatically	SHIFT LOCK  * TAIPEI # TUE 1-15-2002 CAPS A 5-25-01

SEARCHING WORLD TIME

1. Press 《clock》 twice for world time mode (display without symbol *)
 2. Press 《△》 or 《▽》 to search the desired city.
- # There are 43 major cities world time

STOP WATCH MODE

1. Press 《clock》 key repeatedly to select Stopwatch mode.
In the second line , the first “00” stands for HOUR ,the second “00” stands for MINUTE, the third “00” stands for SECOND , and the last “00” stands for MILLISECOND
2. The function of the search keys: 《△》 《▽》
 - 1)Start the initial time counting from “00” and restart the time counting after stop
 - 2) Stop the time counting and the running of the signal “j” together
 - * The time will not be counted in the inner of the unit
 - 3) Stop the running of the signal “j” solely after pause
3. The function of the keys: 《△》 《○》
 - 1) Pause the time counting on the display after start
 - * The time counted will be kept on the display without running
 - *The signal “j” will still be running
 - * The time is still be counting in the inner of the unit
 - 2) Restart the time counting after pause
 - * The time will be counting from the sum of the time on the display and the inner of the organizer
 - 3) Clear the time counting after stop completely
 - * If without the time counting in the inner ,press it once to clear the time to “00”
 - *If with the time counting in the inner of the unit, press it once the display the sum of the counting and twice to clear the time counting to “00”
- 4.The function of the key 《CE》
Press 《CE》 key to clear the time counting to “0” whatever the status and period is

OPERATION	DISPLAY
-----------	---------

Press «clock» repeatedly to select the STOP WATCH function	STOP WATCH 00-00-00_00
Press SEARCH keys to start the initial time counting from “00”	STOP WATCH 00-00-12_88 111111
Two options: Option (1)	
Press SEARCH keys to stop the time counting #The time counted is kept #The signal “ ” stop running	STOP WATCH 00-00-12_88 111
Press «OK» key to clear the time counting	STOP WATCH 00-00-00_00
Option (2)	
Press «OK» key to pause # The signal “ ” is still running and time is being counted in the inner	STOP WATCH 00-00-12_88 11111111
Press SEARCH key to stop the running of the “ ”	STOP WATCH 00-00-12_88 11111111
Press «OK» key once to display the time sum (on the screen and in the inner) # The signal “ ” keeps calm # The inner time counting is added into the time on the screen	STOP WATCH 00-02-45_68 11111111
Press «OK» again	STOP WATCH 00-00-00_00

COUNT DOWN MODE

1. Press «clock» key repeatedly to select count down mode.
In the third line , the first “00” stands for HOUR ,the second “00” stands for MINUTE and the third “00” stands for SECOND
The maximum can be set is “59”
2. The time to be counted down can be set by alternative methods below:
 - 1) Press up or down cursor once to add or minus one unit of the time and the cursor won't move automatically
 - 2) Input the time directly and the cursor will move automatically
* If the number input exceeds the maximum , it will not be accepted until you input the valid number
3. Press left or right cursor key to move the cursor
4. Press «OK» key once to start and twice to enter the edit mode
5. When the time has jumped down to “00-00-00” , the sound “Bi-Bi” will be heard for 30 seconds with the flashing of the time signal “00-00-00”. Pressing any key to stop the sound
6. Example : Set and edit the counted time :13 hours, 1 minute and 2 seconds

OPERATION	DISPLAY
Press «clock» key to select Count Down function	COUNT DOWN

	00 – 00 – 00
Input [1] [0] Or press up cursor once then press right key	COUNT DOWN 00 – 01 – 00
Press number key [2] or Press «▲» twice to select the number then press «▶»	COUNT DOWN 00 – 01 – 02
Press [9] [1] [3]	COUNT DOWN 13 – 01 – 02
Press «OK» key to start the counting down	COUNT DOWN 13 – 01 – 01
Press «OK» key to enter the edit mode	COUNT DOWN 13 – 01 – 00

ALARM MODE

Alarm types:

The following options are available; indicating what type of alarm is on:

Time Alarm: (((`))) - timed alarm (See example)

Hourly Chime:  - beeps for one second every hour

Schedule Reminder: (((/))) - alarms all timed Schedule events

Example: Setting alarm at 6:30 P.M.

OPERATION	DISPLAY
Press «clock» key to select ALARM mode (The hour format has been set as 12-hour format in home time)	ALARM A 12-00
Press «EDIT»	ALARM SET A 12-00
Press 0630, then press «AM/PM» to toggle between “AM” and “PM”	ALARM SET P 06-30
Press «clock» repeatedly until (((`))) appears	ALARM SET (((`))) P 06-30
Press «OK»	ALARM (((`))) P 6-30

Alarm function won't be on unless icon is displayed on the LCD.












 


When the home time reaches the alarm setting, the alarm will keep sounding for 60 seconds. Press any key to turn off it.





If you want to change the alarm setting, just repeat all procedures above, then the new setting will overwrite the old setting.

TELEPHONE MODE

There are two kinds of telephone directory- Personal & Business.

The content of the two kinds of the telephones is the same
 # You can input 36 characters or numbers Max. in NAME, E-mail ,URL fields and 36 numbers or the alphabet “F” or “P” Max. in each Number field.(For ADDRESS, 72 Max.)
 Example: PERSONAL-(name) JOHN SMITH, (address)TAIPEI,
 (E-mail)elelux@elelux.com.tw ,(URL):www.hinet.com (home No.) 02-7866143 , (WORK No.): 02-7866679 (FAX No.):02-7866679 ,(Mobile No.)02-7864329, (PAGER No.): 02-7864573

OPERATION	DISPLAY
Press «phone» to select PERSONAL mode.	PERSONAL?  P CAPS
Enter JOHN «space» SMITH	NAME  P JOHN SMITH CAPS
Press «▼» key	ADDRESS  P ADDRESS?
Input T A I P E I	ADDRESS  P TAIPEI_ CAPS
Press «▼» key	E-mail  P E-MAIL ?
Input “ e l e l u x ”	E-mail  P elelux_
Press «@» to get the symbol “@”	E-mail  P elelux@_
Input e l e l u x «.» c o m «.» t w	E-mail  P ◀ elux.com.tw_
Press «▼» key	URL  P URL?
Input w w w . h i n e t . c o m	◀  P w.hinet.com_
Press «▼» key	HOME  P HOME# → _
Key in 02-7866143 then press «▼» key	HOME SHIFT LOCK  P HOME# → 02-7866143_ CAPS
Input WORK No. “02-7866679” then press «▼» key	WORK SHIFT LOCK  P WORK# 02-7866143 → 02-7866679_
Key in F0 2 «—» 7 8 6 4 4 7 9 Press «▼» key	FAX SHIFT LOCK  P FAX# 02-7866679 → F02-7864479_

Key in 02-7864329 Press «▼» key	CELL SHIFT LOCK  P MOBILE# F 02-7864479 → 02-7864329_
Press «▼» key and input PAGER no."02-7864573"	PAGER SHIFT LOCK  P PAGER# 02-7864329 → 02-7864573_
Press «go» key	STORED!  P CAPS
2 seconds later	P  P PERSONAL? CAPS

The following symbols can be obtained by pressing «SYM» repeatedly:

/	\	\$	#	_	:	?	!	()	£	¥	*
~	'	;	☺	☹	&	€	¡	Đ	đ	¿		

Press «@» or «?» key to get each symbol directly.

The symbols “+, -, ×, ÷, ´” can be displayed by pressing the corresponding key.

Press «SYM» and then press one of the following characters repeatedly to get the desired letters with accent marks.

Press [SYM][A/Á] (CAPS OFF)	display	á → à → ä → â → ã → å → æ → ä
[SYM][A/Á] (CAPS ON)	display	Á → À → Ä → Â → Ã → Å → Æ
[SYM][E/É] (CAPS OFF)	display	é → è → ë → ê → ě
[SYM][E/É] (CAPS ON)	display	É → È → Ê → Ë → Ě
[SYM][R/Ř] (CAPS OFF or ON)	display	Ř
[SYM][Z/Ž] (CAPS OFF or ON)	display	Ž → Ž
[SYM][Y/Ý] (CAPS OFF)	display	ý → ŷ
[SYM][Y/Ý] (CAPS ON)	display	Ý
[SYM][U/Ü] (CAPS OFF)	display	ú → ù → ü → û
[SYM][U/Ü] (CAPS ON)	display	Ú → Ù → Ü → Û
[SYM][I/i] (CAPS OFF)	display	í → ì → î → î
[SYM][I/i] (CAPS ON)	display	Í → Ì → Î → Ï
[SYM][O/Ó] (CAPS OFF)	display	ó → ò → ö → ô → õ → Ø
[SYM][O/Ó] (CAPS ON)	display	Ó → Ò → Ö → Ô → Õ → Ø
[SYM][S/Š] (CAPS OFF or ON)	display	š → Š → Š
[SYM][D/Ď] (CAPS OFF or ON)	display	Ď
[SYM][N/Ñ] (CAPS OFF)	display	ñ
[SYM][N/Ñ] (CAPS ON)	display	Ñ
[SYM][G/Ç] (CAPS OFF)	display	Ç

[SYM][G/Ç] (CAPS ON)	display	Ç
[SYM][C/ Ć] (CAPS OFF or ON)	display	Ć → Č
[SYM][P/ Þ] (CAPS ON)	display	þ
[SYM][P/ þ] (CAPS OFF)	display	þ

SEARCHING DATA (Phone, Schedule, To Do and Memo modes)

Sequential Search: Touch «△» or «▽» search key.

Direct Search: Input first character(s) of data. Touch «△» or «▽» search key.

VIEWING THE WHOLE DATA (Phone, Schedule, To Do and Memo modes)

When viewing a specific record, press «▲» to scroll through NAME, ADDRESS, E-MAIL and URL fields. Press «▼» key to view the number data

Press «◀» to view the previous page and press «▶» to view the next page if the message is longer than 12 characters.

Auto scrolling. (Only for telephone mode)

Hold «◀» or «▶» key for 3 seconds to start auto scrolling.

Press «◀» or «▶» once for stopping the scrolling and

press «◀» or «▶» key again to restart the scrolling.

Press «CE» to exit from the scrolling mode.

EDITING DATA (Phone, Schedule, To Do and Memo modes)

1. Retrieve the data to be edited. Press «EDIT» to entry the edit mode.

2. Use «◀» or «▶» to move the cursor to the desired position. Press «DEL» for deleting one character or number at the cursor and press «INS» for inserting one space before the cursor.

3. Input the new data.

4. Press «OK»

DELETING DATA (Phone, Schedule, To Do and Memo modes)

1. Find the data to be deleted.

2. Press «DEL» , “DELETE?” appears on the display.

3. Press «OK» , “DELETE!” displays and the data is deleted.

Note: If the «DEL» key has been pressed in error, simply press any other key except «OK» to avoid deletion.

SCHEDULE MODE

1. 1ST line: date message (36 characters Max.); 2nd line: the date of the schedule; 3rd line: the time of the scheduled appointment.

2. Example:

NEW MEETING

18 JULY 2002 12:30 P.M.(set the schedule alarm).

OPERATION	DISPLAY
Press «schd» to select the schedule mode	SCHEDULE? CAPS
Touch NEW «SPACE» MEETING then press «▼» (It has been set 12-hour format in HT)	SHIFT LOCK NEW MEETING 01-01-2003 CAPS A 12-00
Input 07,18,2002(Month, Day, Year) 12,30(Hour, Minute) and then press «AM/PM»	SHIFT LOCK NEW MEETING 07-18-2002 CAPS P 12-30
Press «OK»	SHIFT LOCK STORED! CAPS
Press «clock» repeatedly to select ALARM mode ,then «EDIT» key. press «clock» repeatedly until (((/))) appears . Press «schd»	((((())) SCHEDULE? CAPS

TO DO MODE

To-do activities are stored by date and priority order in two categories: Pending and Done.
Press «◀» or «▶» to toggle between the two conditions: Pending and Done in edit mode.
Example: CALL JACK, 14 NOVEMBER 2001 10:00 P. M.

OPERATION	DISPLAY
Touch «schd» to select TO DO mode.	TO DO? CAPS
Enter CALL «SPACE» JACK. Touch «▼» . (12-hour format has been set in Home Time mode)	SHIFT LOCK PRIORITY: 1->P P 01-01-2002 CAPS A 12-00
Enter a priority (value range is 1-9). Example: 3 Touch «▼» .	SHIFT LOCK PRIORITY: 3->P P 01-01-2002 CAPS P 12-00
Enter: 11-14-2001 for the Month – Day – Year and then 10-00 for the Hour - Minute. Press «AM/PM»	SHIFT LOCK PRIORITY: 3->P P 11-14-2001 CAPS P 10 - 00
Touch «OK» .	SHIFT LOCK STORED! CAPS

MEMO MODE

This area is for miscellaneous memos or notes. A maximum of 36 alphanumeric characters may be entered on the first line and a maximum of 36 numeric characters (digits and "F" or "P") may be entered in the second and third lines.

Example: PASSPORT 321456796129

1. Press «schd» key to select the memo mode.

2. Input PASSPORT 《▼》 321456796129.
3. Press 《OK》 .






SECRET MEMORY

1. Using the password feature available in the Phone, Schedule, To Do and Memo modes can protect data.
2. The password is 6 Max. and it can be alphabets, numbers or their mixture
3. The password can be edited and deleted in HT mode
4. Once password has been set , when you press Power key to activate the organizer and then you want to entry Telephone, Schedule, Memo or To Do mode, you must input the password.
The Password feature is case sensitive. You must use the exact same letters or numbers combination to open the protected data as the password you used to create.


WARNING:

ONCE A PASSWORD HAS BEEN SET, THERE IS NO WAY TO RETRIEVE THE DATA WITHOUT THE CORRECT PASSWORD. PLEASE KEEP A RECORD OF YOUR PASSWORD. THERE IS NO 'BACK DOOR' TO GET PASSWORDED INFORMATION.


SETTING A PASSWORD

OPERATION	DISPLAY
In the home time mode press 《2nd》 《  》  (blinking)	PASSWORD? 
Enter a Password of up to 6 characters. Press《Ok》then RECONFIRM your password.  (blinking)	1ROSY_ 
Touch 《OK》 . Data is now protected with a password.	* NYC WED 1-1-2003 A12-09-00

MODIFYING PASSWORD

- 1.Press 《2nd》 《》 in Home Time mode; enter old password and touch 《OK》 .
- 2.Touch 《OK》 again to confirm password change.
- 3.Modify existing password and touch 《OK》 .
- 4.Enter the password to reconfirm and press 《OK》 to save it.
The screen returns to home time display.

DELETING PASSWORD

- 1.Touch 《2nd》 《》 in Time mode; enter the old password and touch 《OK》 .
- 2.Touch 《OK》 again to confirm
- 3.Press 《2nd》 《CE》 to pop up “DEL PASS.?”
1. Press 《OK》 to confirm and the screen returns to HT mode
The secret has been deleted

SPELLER MODE

1. The most letters of the word than can be input is 36
2. Only in the first line you can input the word
3. When the unit is checking the words , in the third line will appear “J” one by one until it has got the result
4. If the same word can't be found, it will display the index word(s) whose number is the same as the number found in Line 2
5. The function of search key is the same as up/down cursor key when loop through the index words

OPERATION	DISPLAY
Press «spell» key to select the Spelling Check function.	Speller:
Input some word, for example: book	book_
Press «OK» key	Checking...
Two seconds later	Correct !
Two seconds later , the screen displays the input word	book
Input another word “ad” directly	ad_
Press «OK» key	Checking...
Two seconds later	Found: 13
After two seconds	a ▼
Press «▼ » key	▲ ah ▼
Press «▼ » key several times to view the last word	and ▲
Input another word Example: xay	xay_
Press «OK» key	Checking...
Two seconds later	Found: 0
Two seconds later ,the screen returns to the original display	Speller:

CALCULATOR MODE

10-digit calculator
Touch «calc» once.

CALCULATION EXAMPLE	KEY OPERATION	DISPLAY
$(-24) / 4 - 2 = -8$	24 M+/- ÷ 4 - 2 =	-8
$34 + 57 = 91$	34 + 57 =	91
$45 + 57 = 102$	45 = (The addend becomes a constant.)	102
$1/8 = 0.125$	1 ÷ 8 =	0.125

$200 + (10\% * 200) = 220$	$200 + 10 \%$	220
$25 * 5 = 125$ $84 \div 3 = 28$ $68 + 17 = 85$ 182	$25 * 5 M+$ $84 \div 3 M-$ $68 + 17 M+$ MR MC	M125 M28 M85 M182 182
$(1 + \frac{0.025}{100} * 90) * 70000$ = 71575	$0.025 * 90 \div 100$ + $1 * 70000 =$	71575
$(1 + 0.075)^5 * 55000 =$ 78959.61292	$1 + 0.075 * 55000$ ===== (The multiplicand becomes a constant.)	78959.61292
$\sqrt{10000} = 100$	$10000 \sqrt{}$	100

Press «CE» key once for clearing the last entered operand and twice for clearing all input.
«AC» for clear all of the input

CONVERSION MODE

Press «calc» twice for currency conversion, three times for EURO currency conversion and four times for metric conversion.

CURRENCY CONVERSION

1. Setting the new currency rate.

1 HKD = 4.2 NTD

OPERATION	DISPLAY
Press «calc» key to select the currency conversion mode.	EURO → USD 0.
Press « $\triangle \nabla$ » search key to select the desired currency conversion. EX: JPY → USD	JPY → USD 0.
Press «2nd» «EDIT» key to enter the setting mode, and the 1 st character will flash.	J <u>P</u> Y → USD 0.
Press HKD « \blacktriangleright » NTD and then press «OK» to move the cursor to the rate.	HKD → NTD <u>0.</u>
Input the rate amount 4.2	HKD → NTD <u>4.2</u>
Press «OK» key to store the setting.	HKD → NTD 4.2

Press «CE» key to exit from the setting mode.

The conversion calculation is the same as the metric conversion.

2. Example: ? HKD = 508.2 NTD

OPERATION	DISPLAY
Press $\langle\triangle\rangle$ or $\langle\nabla\rangle$ search key to select the desired conversion set in the currency conversion mode.	HKD \rightarrow NTD 4.2
Input 508.2	HKD \rightarrow NTD 508.2
Press $\langle\blacktriangleleft\rangle$	HKD \leftarrow NTD 121.

EURO CURRENCY CONVERSION

Example: 500 EURO =? ATS

OPERATION	DISPLAY
Press $\langle\text{calc}\rangle$ key to select the EURO conversion	EURO \rightarrow ATS 13.7603
Press $\langle\triangle\rangle$ or $\langle\nabla\rangle$ search key to select the desired EURO conversion if necessary.	EURO \rightarrow ATS 13.7603
Input 500	EURO \rightarrow ATS 500.
Press $\langle\blacktriangleright\rangle$	EURO \rightarrow ATS 6880.15

METRIC CONVERSION

Example: 100 Meters =? Feet

OPERATION	DISPLAY
Press $\langle\text{calc}\rangle$ key to select the metric conversion.	inch \rightarrow cm 2.54
Press $\langle\triangle\rangle$ or $\langle\nabla\rangle$ search key to select the desired conversion set. Example: feet \rightarrow m	ft \rightarrow m 0.3048
Input 500	ft \rightarrow m 500.
Press $\langle\blacktriangleleft\rangle$ key	ft \leftarrow m 1640.419947

 

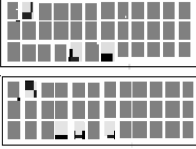 
GAME MODE

There are three games for your choice: HAMMER, GUESS and LOTTERY game.

HAMMER GAME :

1. The game of "HAMMER" with 3 levels (from 1 to 3) in prompt speed.

2. Move the “hammer” at upper row to knock the “segment or stairs” at the second or third row.
3. When two “8” are displayed in the same line, , “GAME OVER! XXXX(the scores)” will be displayed.
4. When the highest score “9999” is got, “YOU WIN! 9999” will be displayed.

OPERATION	DISPLAY
Press [spell] key to select Hammer game	HAMMER?
After 1 second, screen displays “LEVEL 1?” Press «▲» «▼» «△» or «▽» key to choose level.	LEVEL 1?
Press «OK» to begin the game	
Press «◀» or «▶» to move the “hammer”	
Press «OK» or «space» to knock the segment or stairs.	
When two 8 are displayed in the same line	GAME OVER! 0026
Press «OK»	HAMMER?

GUESS GAME

1. Input 1 correct number and wrong position can get a [B]
2. Input 1 correct number and correct position can get a [A]
3. Wrong number and wrong position get nothing
4. It can input guess number 10 times, if you get the correct answer during 10 times, the display will show “☺☺☺... YOU WIN!” scrolling 3 times then restart next game, If you can’t get the correct answer during 10 times guessing, then the display will show “☹☹☹ ...YOU LOST!” scrolling for 3 times then restart next game.

Example:

OPERATION	DISPLAY	NOTE
Press «spell» key twice to enter Guess game	GUESS?	
1 second later	# # # # 0 0 0 0	The answer of 4-digit number can’t repeat. EX : the answer is 5732
Input the guess number 1 2 3 4	# # # # 1 2 3 4	

Press 《OK》	1A1B 1	The number on the right denotes the times of guessing.
After 1 second	### 1 0000	
Then input 5678 Press 《OK》	1A1B 2	

LOTTERY GAME

1. Press 《spell》 to select lottery game.
2. The set can be setup and its range is from 1 to 9, the default is 6
3. The range of the maximum is from 1 to 99, the default is 49.
But the maximum must equal or exceed the set
4. If the set exceeds the range, "ERROR!" will appear and then the screen will return back to the wrong set

OPERATION	DISPLAY
Press 《spell》 key to select lottery game # The signal "1~9" stands for the range of the set to be selected	Set #(1~9) : 6
Press 《9》 to set the sets of the numbers, then press 《OK》 # The signal "09~99" stands for the range of maximum to be selected	Max # (09~99): 49 _
Press《4》 《9》 《OK》or《OK》directly to get the lottery number # 9 set Lottery numbers displayed by random from 01 to 49 and the numbers should be different at the same display # You can continue to press 《OK》 key for getting another set of numbers	15 44 03 38 12 14 28 43 25

ADJUST LCD CONTRAST

In Home Time mode press the search key 《△》 to darken and 《▽》 to lighten the display

PC-LINK

Press the key 《pc link》 to synchronize with the PC after the transmission line has been connected

It only can be pressed effectively in the initial display of Home time ,Phone ,Schedule, Memo, and To Do mode

CHANGING BATTERIES

Turn off the power.

Remove the battery cover on the back of the unit.

Remove the battery and insert the new battery.

Replace the battery door.

Press any key except ENTER to skip RESET for preventing loss of previously stored data.
If "INITIAL" appears on the screen and stays for about 6 seconds after changing batteries, the data stored won't be lost

CAUTION:

Auto power off will be activated after 5 minutes if no key is touched.

Touch 《on/off》 key again to restart the Organizer.